

**Translation table from »Mechanical version« to  
»Mechanical Configuration«**

<b>Motor</b>	<b>»MW ver.«</b>	<b>»Mech. version«</b>
SM3	1-0-0-0, 1-0-1-0	MC1
SM3	1-1-0-0, 1-1-0-1, 1-1-1-1, 1-1-0-2, 1-1-1-2, 1-1-2-0, 1-1-1-0	MC2
SM4S520M1	1-0-0-0	MC3
SM4S520M1	1-0-0-1, 1-0-0-5	MC4
SM4S520M1	1-0-0-2, 1-0-0-3, 1-0-0-4	MC5
SM4S900M3	1-0-0-1, 1-0-0-2, 1-0-0-3, 1-0-0-4, 1-0-0-5	MC6
SM4S900M3	3-0-0-7	MC7
SM4S520M1/M3	1-0-0-6	MC8
SM4S900M3	/	MC9
SM4S520M1	/	MC10
SM4S900M3	/	MC11
SM4S520M2	2-0-0-0	MC12
SM3	/	MC13